



Milbook F10

USER MANUAL

July, 2024

NOTE

The information in this manual is subject to change without notice.

Table of Contents

Chapter 1 Ready to Start	1
Get the Device Running	2
Open Box to Check	2
Connect the Power Supply	3
Turn On and Off the Device	5
Device Appearance	6
Front Components	6
Rear Components	8
Right-Side Components	9
Left-Side Components	9
Top Components	10
Bottom Components	12
Installation and Uninstallation of SIM and TF Card	13
Chapter 2 Operate Your Device	15
Use the Touchscreen	16
Use Multi-touch Gestures	17
Use Wireless Connections	19
Use the WLAN	19
Use the Bluetooth Feature	20
Chapter 3 Manage Power	21
AC Adapter	22
Battery Pack	23
Charge the Battery Pack	23
Check the Battery Level	24
Battery Low Signals and Actions	24
Replace the Battery Pack	25
Power-Saving Tips	27
Chapter 4 Expand Your Device	28

Connect Peripheral Devices	29
Connect a USB Device	29
Connect a USB Type-C Device	29
Connect a Monitor	29
Connect an Audio Device	29
Chapter 5 Use Bios Setup	30
When and How to Use	31
Menu Descriptions	32
Main Menu	32
Security Menu	34
Boot Menu	35
Save & Exit Menu	35
Chapter 6 Care And Maintenance	36
Protect the Device	37
Use an Anti-Virus Strategy	37
Take Care of the Device	38
Location Guidelines	38
General Guidelines	38
Cleaning Guidelines	40
Battery Pack Guidelines	40
Touchscreen Guidelines	41
When Traveling	42
Chapter 7 Troubleshooting	43
Preliminary Checklist	44
Solve Common Problems	45
Battery Problems	45
Bluetooth Problems	45
Display Problems	46
Hardware Device Problems	46
Power Management Problems	46
Software Problems	47

Sound Problems	47
Startup Problems	48
WLAN Problems	49
Restart the Device	50

Chapter 1






READY TO START

This chapter first tells you step by step how to get the tablet up and running. Then, you will find a section briefly introducing the external components of the tablet.

GET THE DEVICE RUNNING

OPEN BOX TO CHECK

After unpacking, you should see the following standard items:

<ul style="list-style-type: none"> ● I10A Rugged Tablet PC 	
<ul style="list-style-type: none"> ● PowerCord 	<ul style="list-style-type: none"> ● Battery (Built-in) 
<ul style="list-style-type: none"> ● Power Adapter 	
<ul style="list-style-type: none"> ● Carry Handle 	<ul style="list-style-type: none"> ● Hand-Strap 

CONNECT THE POWER SUPPLY

Note: Use only the power adapter provided with this product. Using other power adapters may damage your device.

Note:

- The battery will be shipped to you in transport mode, which protects the battery from charging or discharging. When you install the battery for the first time and connect the tablet to AC power, the battery will automatically exit this mode for you to start using.
- Connecting the power adapter will begin charging the battery. Refer to Chapter 3 for charging instructions.

It must be connected to AC power supply when it is turned on for the first time.

1. Open the waterproof plug of DC port. (On left side when the device is flat on the table.)



DC power outlet

2. Insert the DC head of the power adapter into the DC port of the device.
3. Plug the female end of the power cord into the power adapter and the male end into the power outlet.
4. The power outlet supplies power to the device through an adapter. Now you can power on the device.

TURN ON AND OFF THE DEVICE


TURNING ON

1. Press the power button  . The operating system Microsoft Windows will start.



TURNING OFF

When you are work done, you can power it off or leaving it in Sleep or Hibernation mode:

To...	Do this...
Power off (Shutdown)	Click  → [Power] → [Shutdown]
Sleep	Use any of the following methods: <ul style="list-style-type: none"> ● Press the power button. ● Click → [Power] → [Sleep]
Hibernation	This item does not appear in the power menu by default. If you want to set up this mode, please go to Windows Settings to set it up.

「Sleep」 is a default function for this action. You can change the result of this action through Windows Settings.

DEVICE APPEARANCE

Note: Depending on the special model you purchased, the look and colour of the device may be different from the graphics shown in this manual.


Note: Please open the waterproof plug before using the ports or device. When not using ports or device, please completely cover the waterproof plug to isolate water and dust.

FRONT COMPONENTS



SYMBOL	COMPONENTS	DESCRIPTION
①	Microphone	Used to receive external sounds.
②	Stereo speakers	Play the device sounds.
③	Indicator light	Up: Blue when is turned on, off when is shutdown, and blinks when the internal small battery is switched for power supply.
		Down: (Red and blue) Red when is charging; Blue when is full of battery; Red blinks when is in low charge, and no light when is discharging.
④	F key	If the scanner function is selected, this button serves as the 2D scan button. If the scanner function is not selected, this button has no function. If needed, it can also be configured automatically through software installation.
⑤	Windows HOME	Used to open a Windows shortcut.
⑥	Volume+ key	Used to increase the device volume.
⑦	Volume- key	Used to decrease the device volume.
⑧	Power button	Used to sleep, wake up, power on and off the device.
⑨	LCD screen	Presents the device' s images, including touch screen function.

REAR COMPONENTS

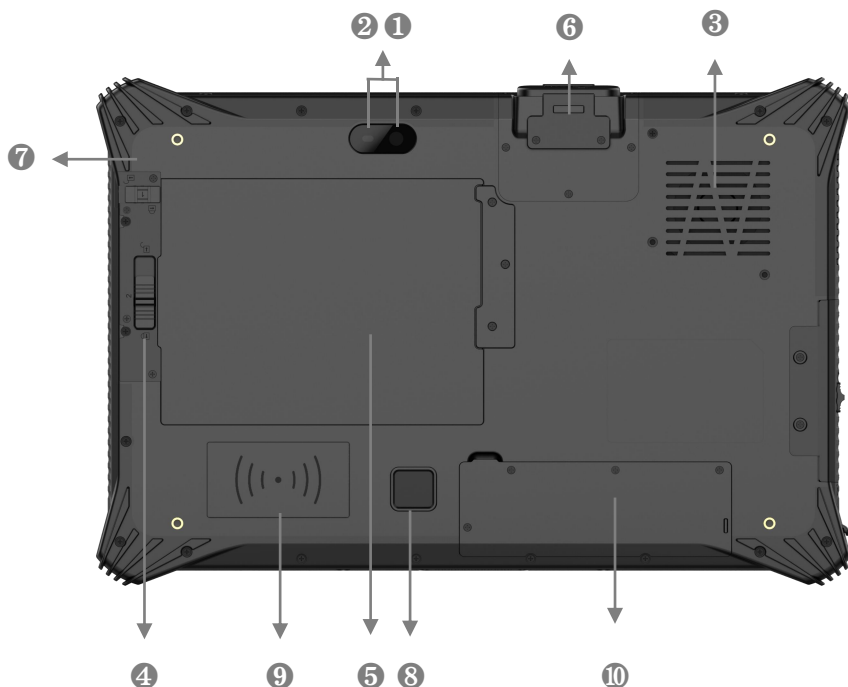


SYMBOL	COMPONENTS	DESCRIPTION
①	Camera	Used for photo and video recording.
②	Flashlight	Software installation is required to enable the lighting function.
③	Cooling fan	Used for cooling the device.
④	Battery lock	Lock the battery cover.
⑤	Battery	The position of the large battery.


6	Plastic top shell	The standard configuration includes a network port, with optional RS232 serial port, USB 2.0 port, or scanner available. °
7	Battery switch latch	It is closed under normal power supply and unlocked when the large battery is switched. The lock should be restored after the replacement.
8	Fingerprint	Used to unlock the device.
9	NFC	NFC area (NFC is an optional feature; if selected, this area serves as the card swipe area).
10	SSD	The port position of the solid hard drive.

RIGHT-SIDE COMPONENTS




LEFT-SIDE COMPONENTS

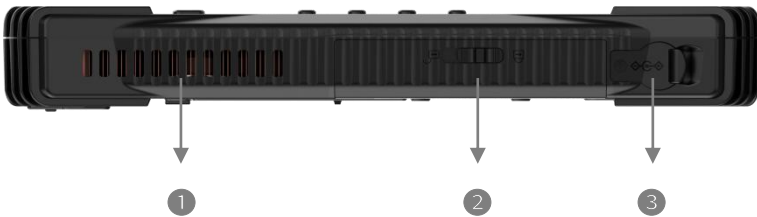

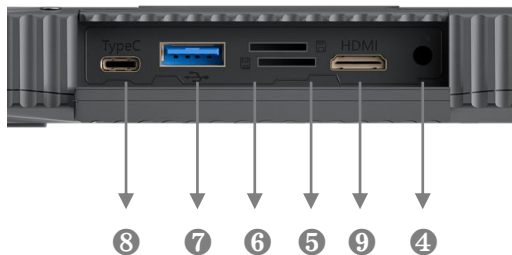

	COMPONENTS	DESCRIPTION
①	Cooling fan	Used for cooling the device.
②	Connector protective cover	Used to protect connectors, slide to the left to open the protective cover.
③	DC Power supply holes	Connect a power adaptor.
④	3.5mm Earphone Jack	Connect an audio device.
⑤	TF	Install TF memory card, max: 128G.
⑥	SIM	Install SIM card.
⑦	USB3.0	Connect a USB device.
⑧	Type-C	Connect a USB-C device.
⑨	HDMI	Connect a HDMI display or projector.

TOP COMPONENTS

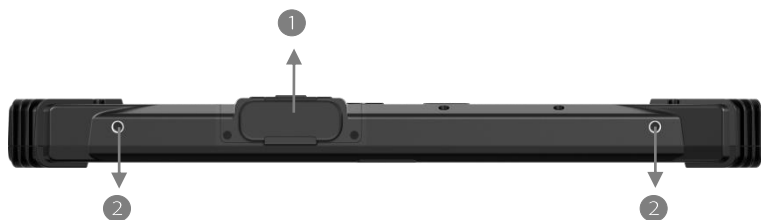


SYMBOL	COMPONENTS	DESCRIPTION
①	One out of five module ports	The standard configuration includes a network port, with optional RS232 serial port, USB 2.0 port, or scanner available.
②	Hand screw position	Install the M 4 handle screw for easy installation of the carry handle.

Handle Diagram: (Picture is for reference only)




BOTTOM COMPONENTS

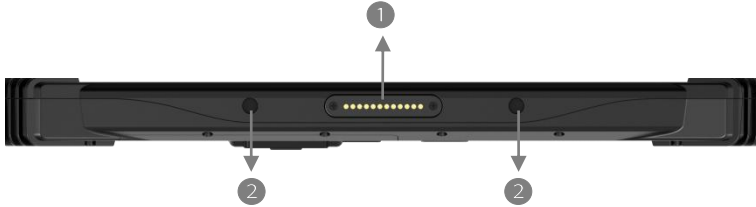

NO.	Component	Description
①	Pogo pin	Works with positioning holes to connect to vehicle mounts and charging docks, used to expand USB, RJ45, and RS232 communication ports.
②	Positioning hole	Serves a securing function when connecting vehicle mounts and charging docks.

INSTALLATION AND UNINSTALLATION OF SIM AND TF CARD

Install a Micro SIM card & a TF card in the following location.

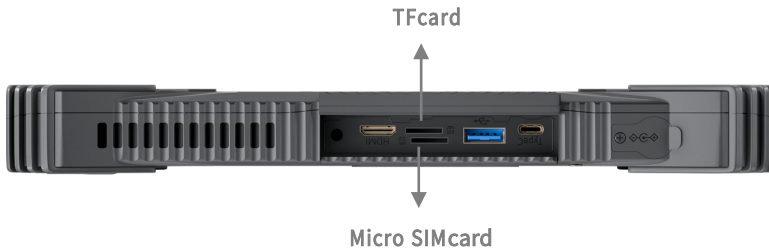

The following figure shows the installation method:



Please follow these steps to remove the SIM card or TF card:

1. Gently press the SIM card or TF card inward.
2. The card will pop out automatically.
3. You can then easily remove the card.

Please handle the card with care during the process to avoid any damage.

Docking Charger Diagram: (Picture is for reference only)



(Front + Charger)



(Rear + Charger)

Vehicle Mount Diagram: (Picture is for reference only)



(Front + Vehicle mount)



(Rear + Vehicle mount)

Chapter 2

OPERATE YOUR DEVICE

This chapter provides information about the use of the device.

If you are new to device, reading this chapter will help you learn the operating basics. If you are already a Tablet user, you may choose to read only the parts containing information unique to your Tablet.

Note :

- Do not expose your skin to the Tablet when operating it in a very hot or cold environment.
- The Tablet can get uncomfortably warm when you use it in high temperatures. As a safety precaution in such a circumstance, do not place the Tablet on your lap or touch it with your bare hands for extended periods of time. Prolonged body contact can cause discomfort and potentially a burn.

Use the Touchscreen

Note : Do not use a sharp object such as a ballpoint pen or pencil on the touchscreen. Doing so may damage the touchscreen surface. Use your finger or the stylus.



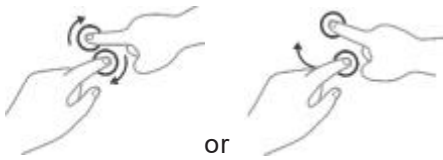
1. elect models have a capacitive touchscreen. This type of touchscreen responds to objects that have conductive properties, such as fingertips and a capacitive-tipped stylus. You can navigate on the screen without using a keyboard, or mouse.
2. he following table shows how you use the touchscreen to obtain equivalent mouse functions.




Term / Action	Equivalent Mouse Function
Tap : Touch the screen once.	Click / Point
Double-tap : Touch the screen twice rapidly.	Double-click
Tap and hold : Tap and hold until a popup menu appears.	Right-click
Drag : Click and hold the screen while moving.	Drag

Use Multi-touch Gestures

You can interact with your Tablet by placing two fingers on the screen. The movement of the fingers across the screen creates “gestures,” which send commands to the Tablet.

Here are the multi-touch gestures that you can use:

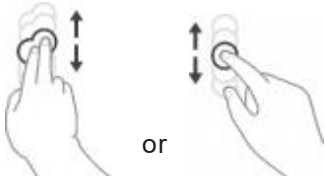Gestures	Actions (=finger down ; =finger up)	Descriptions
Pan (Scroll)	 <p>or</p> <p>Drag 1 or 2 fingers up or down.</p>	<p>Use panning to see another part of a page that has scroll bars.</p>
Zoom (Pinch)	 <p>Move two fingers apart / toward each other.</p>	<p>Use zooming to make an item (a photo for example) on the screen larger or smaller. The gesture works in applications that support mouse wheel zooming.</p>
Rotate	 <p>or</p> <p>Move two fingers in opposing directions. -or- Use one finger to pivot around another.</p>	<p>Use rotating to move a picture or other item on the screen in a circular direction (clockwise or counter-clockwise). The gesture works in applications that support the specific gesture.</p>

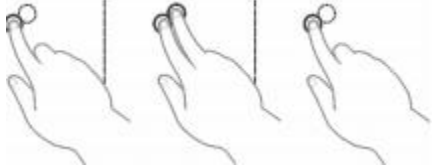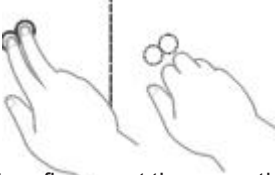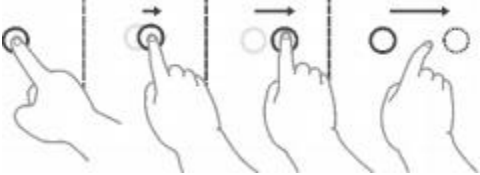Gestures	Actions (=finger down ; =finger up)	Descriptions
Press and Tap	 <p>Press on target and tap with a second finger.</p>	<p>Use press and tap to access the shortcut menu.</p>
Two-finger Tap	 <p>Tap two fingers at the same time (where the target is in the midpoint between the fingers).</p>	<p>The function is defined by applications that support the specific gesture.</p>
Flicks	 <p>Make quick drag gestures in the desired direction.</p>	<p>Flick left or right to navigate back and forward in a browser and other applications. The gesture works in most applications that support back and forward</p>

Use Wireless Connections

Use the WLAN

The WLAN (Wireless Local Area Network) module supports WIFI

802.11(a/b/g/n/ac/ax).

Turn On / Off the WLAN Radio


To turn on the WLAN radio:

Click  → [Settings] → [Network & Internet] → [WLAN]. Slide the WLAN switch to the [On] position.


To turn off the WLAN radio:

You can turn off the WLAN radio the same way you turn it on.

If you want to quickly turn off all wireless radio, simply switch on Airplane mode.

Click  → [Settings] → [Network & Internet] → [Airplane mode]. Slide the Airplane Mode switch to the [On] position.

Connect to a WLAN Network

4. Make sure that the WLAN function is enabled (as described above).
5. Click the network icon  in the lower right of the task bar.
6. In the list of available wireless networks, click a network, and then click Connect. 4. Some networks require a network security key or passphrase. To connect to one of those networks, ask your network administrator or Internet service provider (ISP) for the security key or passphrase.

For more information on setting a wireless network connection, refer to Windows online help.

Use the Bluetooth Feature

The Bluetooth technology allows short-range wireless communications between devices without requiring a cable connection. Data can be transmitted through walls, pockets and briefcases as long as two devices are within range.

Turn On / Off the Bluetooth Radio


To turn on the Bluetooth radio:

Click  → [Settings] → [Devices] → [Bluetooth], Slide the Bluetooth switch to the [On] position.


To turn off the Bluetooth radio:

You can turn off the Bluetooth radio the same way you turn it on.

If you want to quickly turn off all wireless radio, simply switch on Airplane mode.

Click  → [Settings] → [Network & Internet] → [Airplane mode], Slide the Airplane Mode switch to the [On] position.

Connect to another Bluetooth Device

1. Make sure that the Bluetooth function is enabled (as described above).
2. Make sure that the target Bluetooth device is turned on, discoverable and within close range. (See the documentation that came with the Bluetooth device.)
3. Click  → [Settings] → [Devices] → [Bluetooth].
4. Select the device you want to connect from the search results.
5. Depending on the type of Bluetooth device that you want to connect to, you will need to enter the pertinent information.

For detailed information on using the Bluetooth feature, see Windows online Help.

Chapter 3

MANAGE POWER

Your device operates either on external Type-C power, DC or on internal battery power.

This chapter tells you how you can effectively manage power. To maintain optimal battery performance, it is important that you use the battery in the proper way.

AC Adapter

CAUTION :

- The AC adapter is designed for use with your device only. Connecting the AC adapter to another device can damage the adapter.
- The AC power cord supplied with your Tablet is for use in the country where you purchased your device. If you plan to go overseas with the Tablet, consult your dealer for the appropriate power cord.
- When you disconnect the AC adapter, disconnect from the electrical outlet first and then from the device. A reverse procedure may damage the AC adapter or Tablet.
- When unplugging the connector, always hold the plug head. Never pull on the cord.

The AC adapter serves as a converter from AC (Alternating Current) to DC (Direct Current) power because your Tablet runs on DC power, but an electrical outlet usually provides AC power. It also charges the battery pack when connected to AC power.

The adapter operates on any voltage in the range of 100~240V AC.

Battery Pack

The battery pack is the internal power source for the device. It is rechargeable with the AC adapter.


CAUTION : The time to unplug the battery pack is limited to when the battery is not being charged.

NOTE : Care and maintenance information for the battery is provided in

the “Battery Pack Guidelines” section in Chapter 6.

Charge the Battery Pack

NOTE : The rechargeable temperature of the battery is between 0°C and 50°C.

To charge the battery pack, connect the AC adapter to the Tablet and an electrical outlet. The Battery Indicator () on the Tablet glows red to indicate that charging is in progress. When the battery is fully charged, the Battery Indicator lights green.

CAUTION : After the Tablet has been fully recharged, do not immediately disconnect and reconnect the AC adapter to charge it again. Doing so may damage the battery.

Check the Battery Level

NOTE : Any battery level indication is an estimated result. The actual operating time can be different from the estimated time, depending on how you are using the Tablet.

When the battery is fully charged, its power supply time depends on how you use the Tablet. If the software you use requires frequent use of peripheral devices, the power may run out soon.

You can find the battery icon on the Windows taskbar (lower-right corner). The icon shows the approximate battery level.

If your model has more than one battery pack installed, the battery pack discharges in parallel.

Battery Low Signals and Actions

When the battery is low, please connect the adapter immediately, put the device into hibernation, or turn off the device's power.


Replace the Battery Pack

CAUTION :

- There is danger of explosion if the battery is incorrectly replaced. Replace the battery only with the manufacturer's optional battery packs. Discard used batteries according to the dealer's instructions.
- Do not attempt to disassemble the battery pack.
- The battery pack will become hot under long-term operation. Do not touch the hot battery pack with bare hands. After removing the battery pack, place it in a ventilated place.

NOTE: This machine has two electric pools, which can be hot swappable to replace the external large battery.

1. Turn the device so that its bottom is facing up.
2. Move the small battery switch to the left to the unlock position (at this point, the small battery is supplying power, and the first indicator light on the front will blink blue).
3. Turn the large battery on and off to unlock the button, then you can take out the battery.

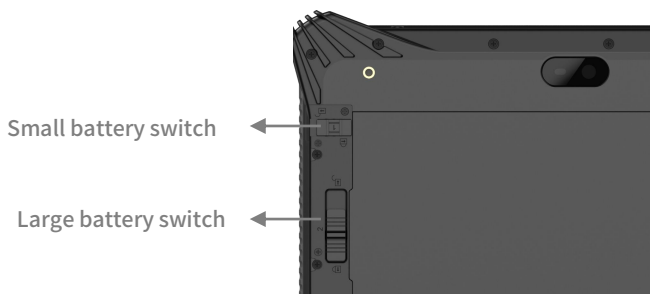

4. Lock it after installing the large battery, and switch to the lock state of small battery on-off.

Note: When the tablet switches to small battery power, the first indicator light will blink blue, and the tablet will enter sleep mode every 3 minutes. Please replace the battery promptly and switch to the main battery power.



Power-Saving Tips

Aside from enabling your device's power saving mode, you can do your part to maximize the battery's operating time by following these suggestions.

- Do not disable Power Management.
- Decrease the LCD brightness to the lowest comfortable level.
- Shorten the length of time before Windows turn off the display.
- When not using a connected device, disconnect it.
- Turn off the wireless radio if you are not using the wireless module (such as WLAN or Bluetooth).
- Turn off the device when you are not using it.

Chapter 4

EXPAND YOUR DEVICE

You can expand the capabilities of your device by connecting other peripheral devices.

When using a device, be sure to read the instructions accompanying the device together with the relevant section in this chapter.

Connect Peripheral Devices

Connect a USB Device

Your device has one USB 3.0 port for connecting USB devices, such as a digital camera, scanner, printer, modem, and mouse.

Connect a USB Type-C Device

Your Tablet has a USB Type-C port. This port supports:

- Data transmission
- Power Supply

Be sure to use the correct specification USB-C power adapter with your Tablet model.

Connect a Monitor

Your device supports HDMI port. Please connect the monitor to the corresponding interface according to the specifications.

Connect an Audio Device

Your device is equipped with a composite audio port, which is 3.5mm in size, and can be connected to a compatible headset microphone.

SAFETY WARNING :



To prevent possible hearing damage, do not listen at high volume levels for long period.

Chapter 5

USE BIOS SETUP

The BIOS Setup Utility is a program used to configure the tablet's BIOS settings. BIOS (Basic Input/Output System) acts as a communication layer between the tablet's hardware and software and is referred to as firmware. Its function is to translate software commands from other layers into commands that the tablet hardware can understand. Your tablet requires BIOS settings to identify tablet components and activate specific features.


This chapter tells you how to use the BIOS Setup Utility.

When and How to Use

You need to run BIOS Setup Utility when:

- You see an error message on the screen requesting you to run BIOS Setup Utility.
- You want to restore the factory default BIOS settings.
- You want to modify some specific settings according to the hardware.
- You want to modify some specific settings to optimize the system performance.

To run BIOS Setup Utility:

1. Click  → **[Settings]** → **[Update & security]** → **[Recovery]**. Under Advanced startup, click Restart now. In the boot options menu, click **[Troubleshoot]** → **[Advanced options]** → **[UEFI Firmware Settings]**. Click Restart.
2. In general, you can use the external keyboard, use the arrow keys to move around and + / – keys to change the setup values. Keyboard information can be found at the bottom of the screen.

NOTE :


- The actual setting items on your model may differ from those described in this chapter.
- The availability of some setting items depends on the Windows version your Tablet is running.

Menu Descriptions


Main Menu

The Main menu contains the various system settings.

- **Build Date and Time** (BIOS version date) : Record the Tablet bios version.
- **Serial number** (SN) : Record Tablet factory code.

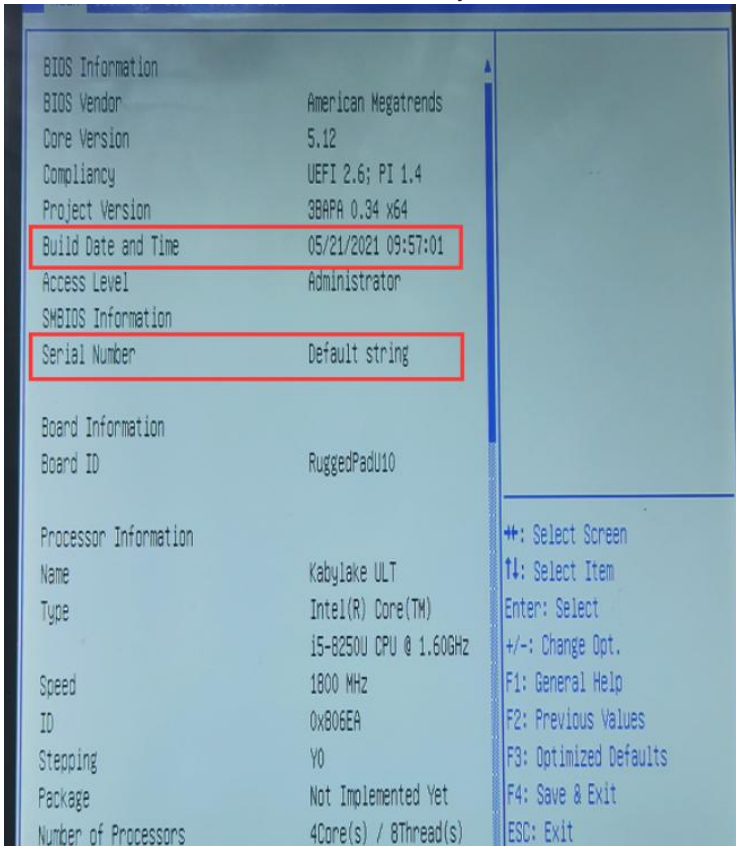

- **EC FM Version:** Record EC firmware information.
- **System Language:** Set system language.
- **System Date:** Set system date.
- **System Time:** Set system time.

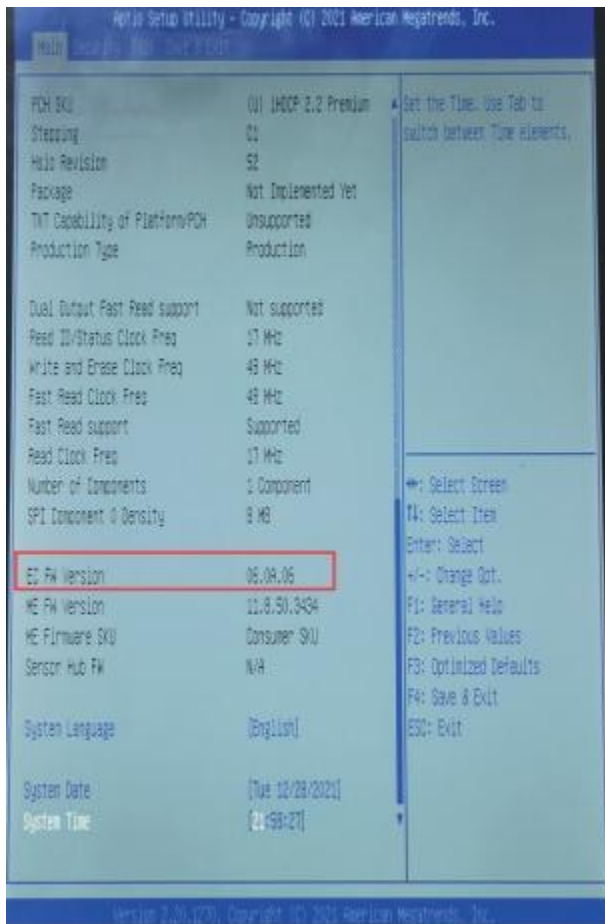

Security Menu


The Security menu contains the security settings, which safeguard your system against unauthorized use.

Note :

- You can set the user password only when the supervisor password has been set.
- If both the administrator and user passwords are set, you can enter any of them for starting up the system and/or entering BIOS Setup. However, the user password only allows you to view/change the settings of certain items.
- A password setting is applied right after it is confirmed. To cancel a password, leave the password empty by pressing the Enter key.

Set Administrator / User Password : Sets the supervisor/user password. You can set the supervisor / user password to be required for starting up the system and / or entering BIOS Setup.

Secure Boot : Set up the system to boot only the operating system that is signed after the supervisor password is set. This prevents unauthorized booting of the system (firmware, operating system, etc.)

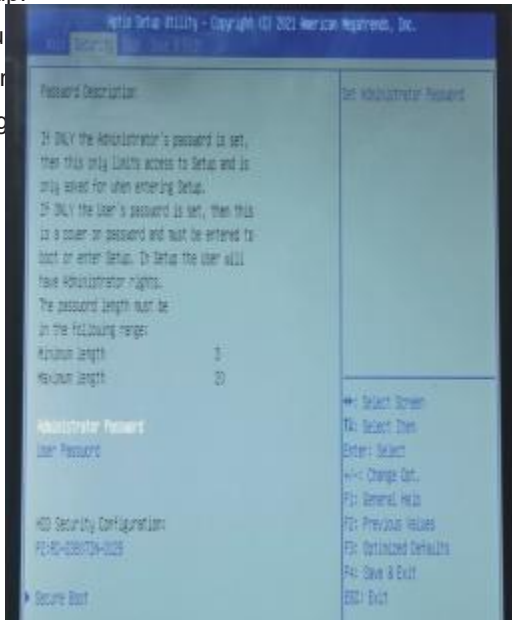

Boot Menu

The Boot menu sets the sequence of the devices to be searched for the operating system.

Save & Exit Menu

The Save & Exit menu displays ways of exiting BIOS Setup Utility. After finishing with your settings, you must save and exit so that the changes can take effect.

- **Save Changes and Exit** : Saves the changes you have made and exits BIOS Setup Utility.
- **Discard Changes and Exit** : Exits BIOS Setup Utility without saving the changes you have made.
- **Save Changes and Reset** : Saves the changes you have made and restart the device.
- **Discard Changes and Reset** : Restart the Tablet without saving the changes you have made.
- **Restore Default** : Load the factory default values of all items.
- **Save as User Defaults** : Save user default settings.
- **Restore User Defaults** : Load factory default values for all items.
- **Saves Changes** : Save the changes you have made.
- **Discard Changes** : All items are restored to their original values.

Chapter 6

CARE AND MAINTENANCE

Taking good care of your device will ensure a trouble-free operation and reduce the risk of damage to your device.

This chapter gives you guidelines covering areas such as protecting, storing, cleaning, and traveling.

Protect the Device

To safeguard the integrity of your data as well as the device itself, you can protect them in several ways as described in this section.

Use an Anti-Virus Strategy

You can install a virus-detecting program to monitor potential viruses that could damage your files.

Take Care of the Device

Location Guidelines

- For optimal performance, use the device where the recommended temperature is between 0 °C and 40 °C. (Actual operating temperature depends on product specifications.)
- Avoid placing the device in a location subject to high humidity, extreme temperatures, mechanical vibration, direct sunlight, or heavy dust. Using the device in extreme environments for long periods can result in product deterioration and a shortened product life.
- Operating in an environment with metallic dust is not allowed.
- Place the device on a flat and steady surface. Do not stand the device on its side or store it in an upside-down position. A strong impact by dropping or hitting may damage the device.
- Do not cover or block any ventilation openings on the device. For example, do not place the device on a bed, sofa, rug, or other similar surface. Otherwise, overheating may occur that results in damage to the Tablet.
- As the device can become very hot during operation, keep it away from objects that are vulnerable to heat.
- Keep the device at least 13 cm (5 inches) away from electrical appliances that can generate a strong magnetic field such as a TV, refrigerator, motor, or a large audio speaker.
- Avoid moving the device abruptly from a cold to a warm place. A temperature difference of more than 10 °C (18 °F) may cause condensation inside the unit, which may damage the storage media.

General Guidelines

- Do not place heavy objects on top of the device when it is closed as this may damage the display.
- To avoid damaging the screen, do not touch it with any sharp object.

- LCD image sticking occurs when a fixed pattern is displayed on the screen for a prolonged period of time. You can avoid the problem by limiting the amount of static content on the display. It is recommended that you use a screen saver or turn off the display when it is not in use.
- To maximize the life of the backlight in the display, please allow the backlight to automatically turn off as a result of power management.
- Do not place heavy objects on top of the device when it is closed as this may damage the display.
- To avoid damaging the screen, do not touch it with any sharp object.
- LCD image sticking occurs when a fixed pattern is displayed on the screen for a prolonged period of time. You can avoid the problem by limiting the amount of static content on the display. It is recommended that you use a screen saver or turn off the display when it is not in use.
- To maximize the life of the backlight in the display, please allow the backlight to automatically turn off as a result of power management.

Cleaning Guidelines

- Never clean the device with its power on.
- Use a soft cloth moistened with water or a non-alkaline detergent to wipe the exterior of the device.

● Gently wipe the display with a soft, lint-free cloth.

- If water or liquid is split onto the device, wipe it dry and clean when possible.

Though your device is water-proof, do not leave the device wet when you can dry it.

- If the device gets wet where the temperature is 0°C (32°F) or below, freeze damage may occur. Make sure to dry the wet device.

Battery Pack Guidelines

● The battery pack is a consumable product and the following conditions will shorten its life:

– when frequently charging the battery pack.

– when using, charging, or storing in high temperature condition.

- To avoid hastening the deterioration of the battery pack thereby prolonging its useful life, minimize the number of times you charge it so as not to frequently increase its internal temperature.

● Charge the battery pack between 10 °C ~ 30 °C (50 °F ~ 86 °F) temperature range. A higher environment temperature will cause the battery pack's temperature to rise.

Avoid charging the battery pack inside a closed vehicle and in hot weather condition.

Also, charging will not start if the battery pack is not within the allowed temperature range.

- It is recommended that you do not charge the battery pack more than once a day.

● It is recommended that you charge the battery pack with the device's power off.

● To maintain the battery pack's operating efficiency, store it in a cool dark place removed from the Tablet and with 30 % ~ 40 % charge remaining.

● Important guidelines when using the battery pack. When installing or removing the battery pack take note of the following:

– avoid installing or removing the battery pack when the device is in Sleep mode.

Abruptly removing the battery pack may cause loss of data or the device may

become unstable.

– avoid touching the battery pack terminals or damage may occur, thereby causing improper operation to it or the device.

The device's input voltage and surrounding temperature will directly affect the battery pack's charge and discharge time:

– charging time will be prolonged when the device is turned on.

To shorten the charging time, it is recommended that you place the Tablet in sleep or hibernation mode.

– a low temperature will prolong the charging time as well as hasten the discharge time.

● When using battery power in an extremely low temperature environment, you may experience shortened operating time and incorrect battery level reading. This phenomenon comes from the chemical characteristics of batteries.

● Do not leave the battery pack in storage for more than six months without recharging it.

Touchscreen Guidelines

● Use the finger or stylus on the display. Using a sharp or metallic object other than your finger or stylus may cause scratches and damage to the display, thereby causing errors.

● Use a soft cloth to remove dirt on the display. The touch screen surface has a special protective coating that prevents dirt from sticking to it. Not using a soft cloth may cause damage to the special protective coating on the touchscreen surface.

● Turn off the device power when cleaning the display. Cleaning the display with the power on may cause improper operation.

● Do not use excessive force on the display. Avoid placing objects on top of the display as this may cause the glass to break thereby damaging the display.

● In low and high temperatures, the touch screen may have a slower response time or register the touch in the wrong location. It will go back to normal after returning to room temperature.

When Traveling

- Make sure that the battery pack is fully charged.
- Make sure that the device is turned off.
- Make sure that all the connector covers are closed completely to ensure the waterproof integrity.
- Disconnect the AC adapter from the Tablet and take it with you. Use the AC adapter as the power source and as a battery-charger.
- Hand-carry the device. Do not check it in as luggage.
- If you need to leave the device in the car, put it in the trunk of the car to avoid exposing the device to excessive heat.
- When going through airport security, it is recommended that you send the device and flash disks through the X-ray machine (the device you set your bags on). Avoid the magnetic detector (the device you walk through) or the magnetic wand (the handheld device used by security personnel).
- If you plan to travel abroad with your device, consult your dealer for the appropriate AC power cord for use in your country of destination.

Chapter 7

Troubleshooting

Device problems can be caused by hardware, software, or both. When you encounter any problem, it might be a typical problem that can easily be solved.

This chapter tells you what actions to take when solving common device problems.

Preliminary Checklist

Here are helpful hints to follow before you take further actions when you encounter any problem:

- Try to isolate which part of the device is causing the problem.
- Make sure that you turn on all peripheral devices before turning on the device.
- If an external device has a problem, make sure that the cable connections are correct and secure.
- Make sure that the configuration information is properly set in the BIOS Setup program.
- Make sure that all the device drivers are correctly installed.
- Make notes of your observations. Are there any messages on the screen? Do any indicators light? Do you hear any beeps? Detailed descriptions are useful to the service personnel when you need to consult one for assistance.

If any problem persists after you follow the instructions in this chapter, contact an authorized dealer for help.

Solve Common Problems

Battery Problems

The battery does not charge (The red indicator is not on) .

- Make sure that the AC adapter is properly connected.
- Make sure that the battery is not too hot or cold. Allow time for the battery pack to return to room temperature.
- If the battery doesn't charge after it has been stored in very low temperatures, try disconnecting and reconnecting the AC adapter to solve the problem.
- Make sure that the battery pack is installed correctly.
- Make sure that the battery terminals are clean.

The operating time of a fully charged battery becomes shorter.

- If you often partially recharge and discharge, the battery might not be charged to its full potential. Initialize the battery to solve the problem. (Fully charge in the shutdown state, discharge to 0%, and then fully charge the shutdown, cycle 2-3 times).

The battery operating time indicated by the battery meter does not match the actual operating time.

- The actual operating time can be different from the estimated time, depending on how you are using the Tablet. If the actual operating time is much less than the estimated time, initialize the battery.

Bluetooth Problems

I cannot connect to another Bluetooth-enabled device.

- Make sure that both devices have activated Bluetooth feature.
- Make sure that the distance between the two devices is within the limit and that there are no walls or other obstructions between the devices.

- Make sure that the other device is not in “Hidden” mode.
- Make sure that both devices are compatible.

Display Problems

Nothing appears on the screen.

- Automatically turn off as a result of power management. Press any key to see if the screen comes back.
- The brightness level might be too low. Increase brightness.
- The screen output may be switched to an external device. Please switch the display via Windows [Control Panel].

The characters on the screen are dim.

- Adjust the brightness and / or contrast.

Bad dots appear on the display at all times.

- A small number of missing, discolored, or bright dots on the screen are an intrinsic characteristic of TFT LCD technology. It is not regarded as a LCD defect.

Hardware Device Problems

The device does not recognize a newly installed device.

- Make sure if any device driver needs to be installed. (Refer to the documentation that came with the device.)
- The device may not be correctly configured in the BIOS Setup program. Run the BIOS Setup program to identify the new type.
- Check the cables or power cords for correct connections.
- For an external device that has its own power switch, make sure that the power is turned on.

Power Management Problems

The device does not enter Sleep or Hibernation mode automatically.

- If you have a connection to another device, it does not enter Sleep or Hibernation mode if the connection is actively in use.
- Make sure that the Sleep or Hibernation time-out is enabled.

The device does not enter Sleep or Hibernation mode immediately.

- If the device is performing an operation, it normally waits for the operation to finish.

The device does not resume from Sleep or Hibernation mode.

- The device automatically enters Sleep or Hibernation mode when the battery pack is empty. Do any one of the following:
 - Connect the AC adapter to the device.
 - Replace the empty battery pack with a fully charged one.

Software Problems

An application program does not work correctly.

- Make sure that the software is correctly installed.
- If an error message appears on the screen, consult the software program's documentation for further information.
- If you are sure the operation has stop, reset the device.

Sound Problems

No sound is produced.

- Make sure that the volume control is not set too low.
- Make sure that the device is not in mute mode.
- Make sure that the device is not in Sleep mode.
- If using an external speaker, make sure that the speaker is properly connected.

Distorted sound is produced.

- Make sure that the volume control is not set too high or too low. In most cases, a high setting can cause the audio electronics to distort the sound.

Startup Problems

When you turn on the device, it does not seem to respond.

- If you are using an external AC power, make sure that the AC adapter is correctly and securely connected. If so, make sure that the electrical outlet works properly.
- If you are using the battery power, make sure that the battery is not discharged.

WLAN Problems

I cannot use the WLAN feature.

- Make sure that the WLAN feature is turned on.

Transmission quality is poor.

- Your device may be in an out-of-range situation. Move your device closer to the Access Point or another WLAN device it is associated with.
- Check if there is high interference around the environment and solve the problem as described next.

Radio interference exists.

- Move your device away from the device causing the radio interference such as microwave oven and large metal objects.
- Plug your device into an outlet on a different branch circuit from that used by the affecting device.
- Consult your dealer or an experienced radio technician for help.

I cannot connect to another WLAN device.

- Make sure that the WLAN feature is turned on.
- Make sure that the SSID setting is the same for every WLAN device in the network.
- Your device is not recognizing changes. Restart the device.
- Make sure that the IP address or subnet mask setting is correct.

I cannot access the network.

- Make sure that the network configuration is appropriate.
- Make sure that the user name or password is correct.
- You have moved out of range of the network.

Restart the Device

When the device crashes due to a problem, you may need to restart the device.

If you are sure that the device has crashed and you cannot use the reboot function provided by the operating system, please reboot in one of the following ways:

- Press **Ctrl + Alt + Del** on the keyboard to bring up the **Ctrl-Alt-Del** screen. This screen provides several operation options including "Restart".
- If the above method does not work, press and hold the power button for more than 5 seconds to force the device to shut down. Then turn it on again.